

Heater Solenoids Valve



26-0348 Heater solenoid valve 12V, 3/4" 2 way



Heater solenoid valve 24V 3/4" 3 way



26-0194 Heater solenoid valve 24V, 3/4" 2 way

Heater Control Valves



26-0025
Heater control valve 5/8"*
pull to open



26-0043

Heater control valve 5/8"

3-way. Inlet from bottom
when bracket on top*.

Pull for water flow to left side.



27-0064 Shut off valve 5/8" x 5/8" hose



26-0074
Heater control valve 5/8"*
pull to open
26-0154
Heater control valve 3/4"*
pull to open



27-0100 Shut off valve 5/8" hose x 3/8" male pipe



26-1661 24V 26-1656 12V Motorized Heater control valve 5/8"

^{*}Heater control valve is directional and will leak if connected wrong



Expansion Solenoid Valves

Expansion valves



26-0162 Expansion valve R12/R134a, 2 Ton **26-0167** Expansion valve R22, 2 Ton

12" cap tube, 5/8"-18 male inlet and 3/4" -16 male outlet



26-0580 Expansion valve R134a Externally equalized, 5/8"-18 male

inlet, 3/4"-16 male outlet 18" capillary tube and 18" external capillary tube with 1/4" Fe nut, 1.5 Ton



26-0190 Block expansion valve R12/R134a **26-0384** Block expansion valve R22

2 ton externally equalized, 3/4" -16 connection to coil, 5/8"-18 inlet and 7/8"-14 outlet female



26-0006 Bulb clamp cadmium plated for above expansion valves

Solenoid valves



25-0380 Solenoid valve 12V, R12/R134a, 5/8"-18 male **25-0381** Solenoid valve 24V, R12/R134a, 5/8"-18 male

 
Thermostatic Expansion Valves

Part No. 14-00344-00 14-00397-00 14-01104-35 26-0190 26-0580 Description

TXV TXV, EM1, Gen V, R134a TXV, 5.5 ton, R134a Valve, Block Expansion Valve



O-Rings



Part No.	Description	I.D.	0.D	T
T27-0601	O-Ring #6	7.65	7/16"	1.78
27-0602	O-Ring #8	10.82	9/16"	1.78
27-0603	O-Ring #10	14	11/16"	1.78
27-0604	O-Ring #12	17.17	13/16"	1.78
27-0647	O-Ring #7	For pressure switche	S	
27-0693	O-Ring	For solenoid valve		

